

Installation and Operating Instructions

Sunway® BASIC
Wood Venetian Blinds

SUNWAY®

SUNWAY®

Sunway® 'Basic' Wood Venetian Blind Fitting Instructions

Thank you for choosing a Sunway® 'Basic' Wood Venetian Blind. We trust that your blind will give you many years of pleasure and satisfaction. Your blind has been carefully made to measure from the sizes that were given. To ease installation, operation and care of your blind, please read the following instructions carefully.


Components supplied :

Blind
Wood Pelmet
1 pair End brackets
1 Centre support bracket (if blind width exceeds 1400mm).
Pelmet mounting clips
Fixing screws


Installing your blind :

Decide whether you will face, top or side fix the blind. Make sure that the position you will be fitting the blind is clear of obstructions such as window handles.

Mark the position of the end brackets, making sure that they are spaced slightly wider apart than the width of the headrail. Drill, plug as necessary, and screw the brackets in position. Mark the position of the centre support bracket (supplied if the blind exceeds 1400mm), taking care that the position you fix it will not interfere with the ladder braids supporting the slats of your blind. If your blind has a ladder braid in the centre, the centre support bracket should be fitted off centre to clear it.

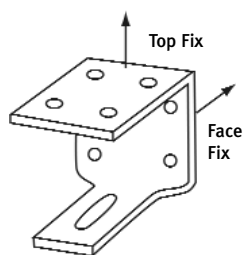

CENTRE SUPPORT BRACKET

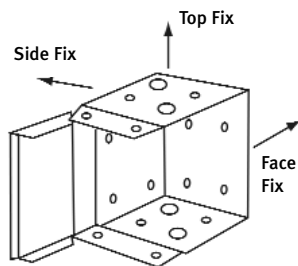


END BRACKETS

Mounting Pelmet :

Mount the pelmet clips onto the front of the headrail by clipping them onto the lip of the headrail. Open the "flaps" on the front of the end brackets and push the headrail of your blind back into all of the brackets. Close the "flaps" on the brackets until they "click" fully closed.

Now clip the Pelmet into it's brackets.

YOUR BLIND IS NOW READY FOR USE !

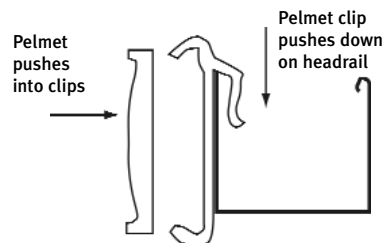

Operating the blind :

Tilting of the blind is carried out by pulling the tilt cords until the desired position is reached. It is advisable to hold both cords to apply friction to the tilt unit.

To lower the blind make sure the slats are tilted to the open position. Pull the cords towards the centre of the blind to release the cord lock and allow the cord to slip through your fingers to lower the blind.

To raise the blind pull the cord until the blind is in the fully raised position then pull the cord so it is vertical which will engage the cord lock.

Cleaning the blind

Your blinds are easy to clean. They can be dusted regularly with a duster or vacuumed with the brush attachment or wiped over with a damp cloth. In extreme cases the blind can be sponged with soap and water or a mild detergent.

Sunway® 'Basic' Wood Venetians are a natural product, thus variations in shade and graining also slight warping may occur.