

FITTING GUIDE: 11.0 ASSEMBLING THE TRACK KIT

SUPPLIED IN THE BOX

(end of the frame boxes)

- **Bracket screws** - For fixing the bottom brackets
- **L Bottom brackets** - For final fixing of the hinges
- **Spanners** - Adjusting track brackets
- **Hinge pins** - To connect the shutters together
- **Wheel carrier bolts** - For hanging the shutters
- **Bottom track pivots** - For guiding the shutters
- **Touch up paint** - Just in case! (*Not supplied with MDF*)

TOOLS REQUIRED

(*Not supplied*)

- **Knife** – For unpacking


Step 1: Unpack the shutters



Each box is labelled with the room name or line number, the shutters do not have room names on, but they are numbered at the top. Therefore, before unpacking, ensure each shutter box is in the correct room and paired with the appropriate frame box.

Then carefully unpack the shutters, stand them against a wall in order 1,2,3,4... left to right.

Step 2: Unpack the track

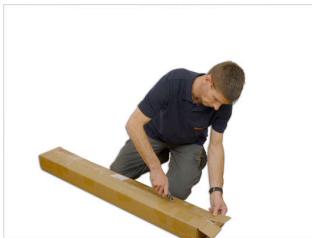

Carefully unpack the the track frame, you will find the hardware box at the end of this frame box be careful not to throw it away with the rubbish.

You will find the top header batten, two side battens, the bottom track and any infills you ordered.

Step 3: The frame



Inside recess - When you fit inside the recess the frame does not need to be put together, the top header batten is fitted first and the side battens are fitted sideways and provide extra support.

Outside recess - If you are fitting outside the recess the frame will need to be assembled prior to fitting. The frame can only be fitted together one way, these photos show how.

Drill some pilot holes down through the top of the track so the joint can be screwed together.