


Sub-frame: INSTRUCTIONS

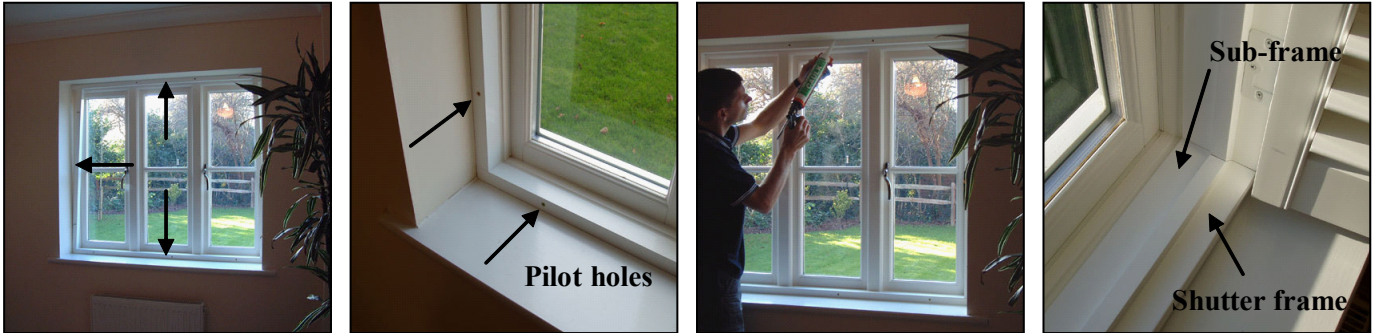

NB: The widest section of the frame should be flush against the wall and the smallest section (30mm wide) against the window frame

1. Measure and cut the sub-frame to length for the top and bottom of the window only.
2. Place the top sub-frame on the bottom sub-frame in the reveal on the window sill, then measure the height of the side sub-frames by measuring down from the top of the reveal, to the top of top of the two sub-frames.
3. Drill 5mm pilot holes through the 30mm wide section at an angle away from the glass, approximately top middle and bottom, depending on the length of the batten for fixing.
4. Position the sub-frame battens and screw into place.
5. Run a bead of filler around the outside of the sub-frame where it touches the wall using some decorators caulk/flexible filler.
6. You are now ready to fit the shutter frame to the sub-frame.

Download my FITTING TIPS online.