



Measuring Guide



Wooden recessed window No handles


A - Width - Measure in three places, use the smallest measurement.

B - Height - Measure in three places, use the smallest measurement.

C - Horizontal Rail - Measure to the middle of where you would like the rail.



D - Top Opening - Measure to top of where you would the shutters to split.

Plan view

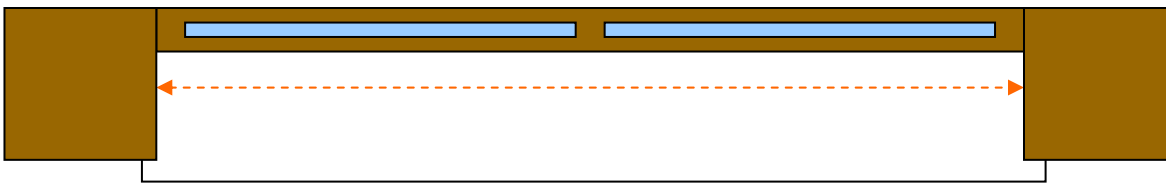

B

Front view

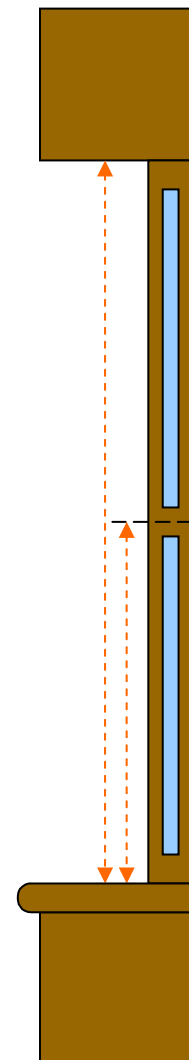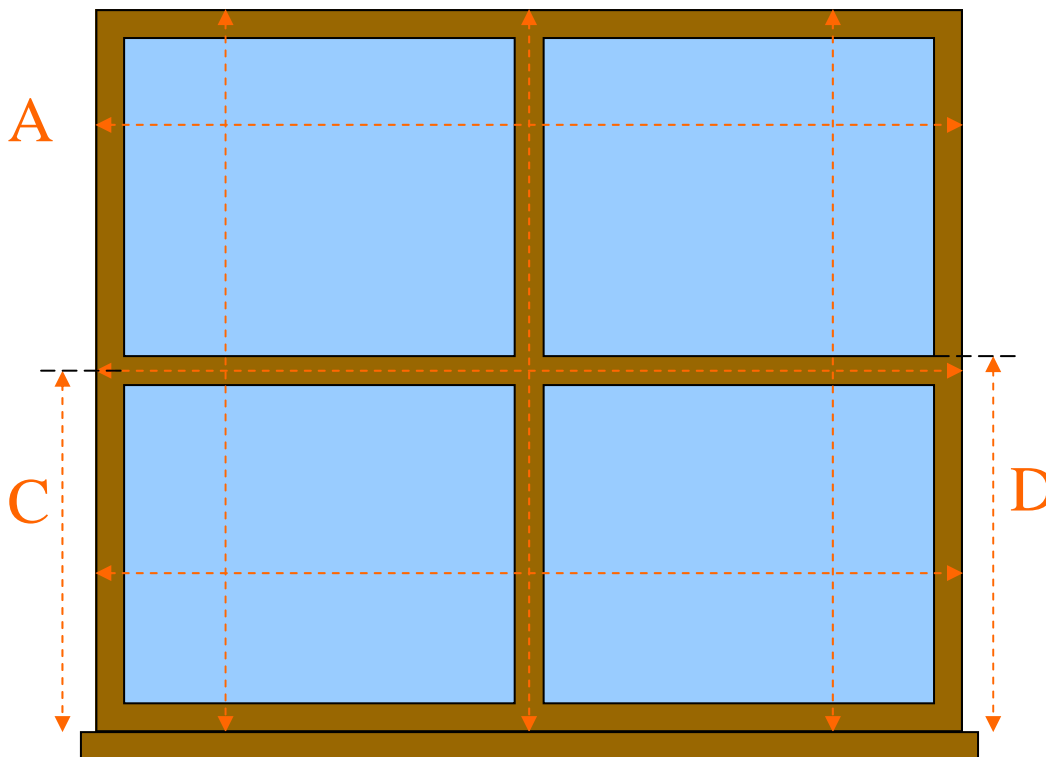

Side Elevation



Measuring Guide



www.opennshut.co.uk


For expert help or advice call 0844 8584025

Wooden recessed window
No handles


The **Orange frame** shows a shutter frame fitted in place

Plan view


1a

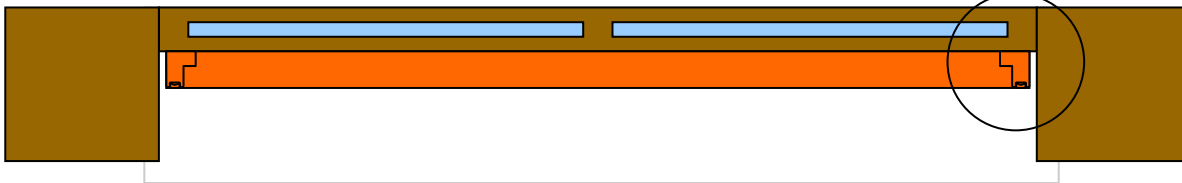

Front view

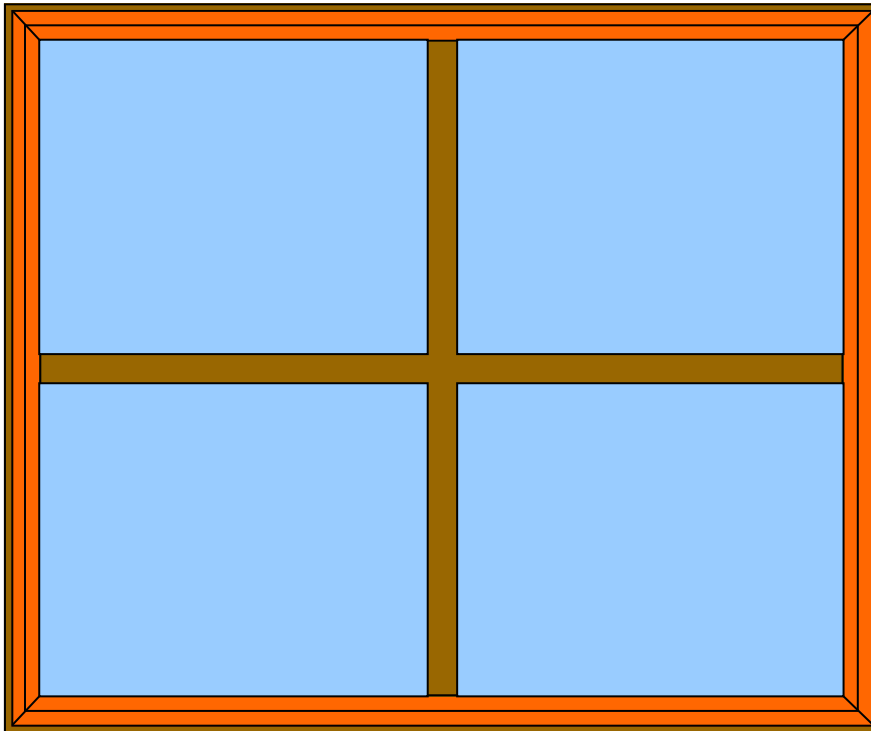

1b

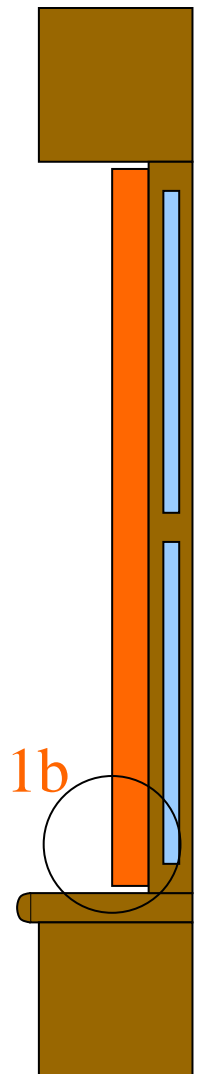

Side Elevation

