


This template can be cut out and used as a guide.

**Please check it's printed to scale before use!**

## MEASURING: L FRAME TEMPLATE

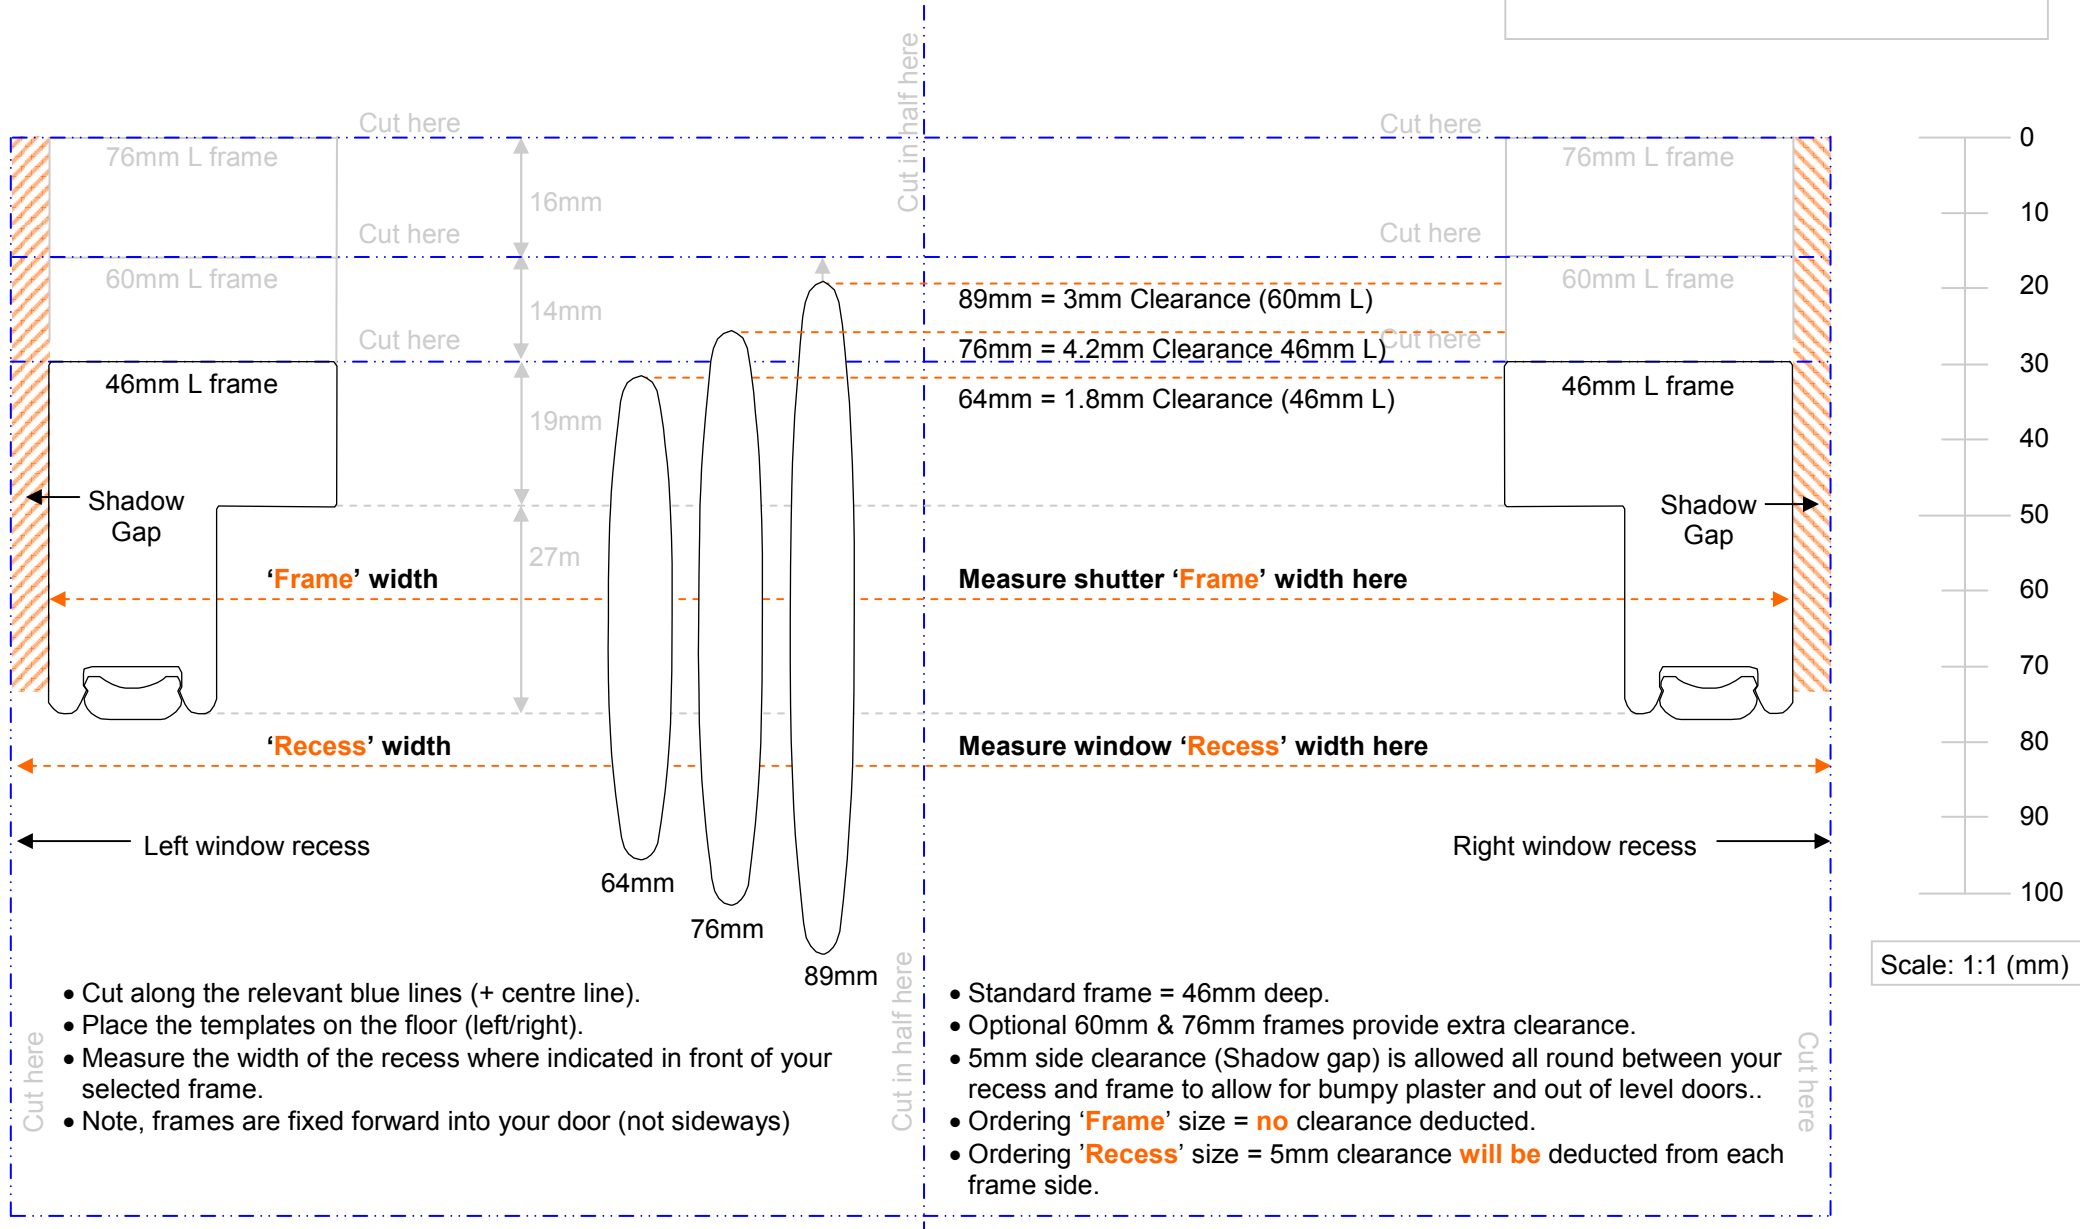

- Cut along the relevant blue lines (+ centre line).
- Place the templates on the floor (left/right).
- Measure the width of the recess where indicated in front of your selected frame.
- Note, frames are fixed forward into your door (not sideways)

- Standard frame = 46mm deep.
- Optional 60mm & 76mm frames provide extra clearance.
- 5mm side clearance (Shadow gap) is allowed all round between your recess and frame to allow for bumpy plaster and out of level doors..
- Ordering 'Frame' size = **no** clearance deducted.
- Ordering 'Recess' size = 5mm clearance **will be** deducted from each frame side.