


MEASURING: TECHNICAL DRAWING OF THE DECO FRAME

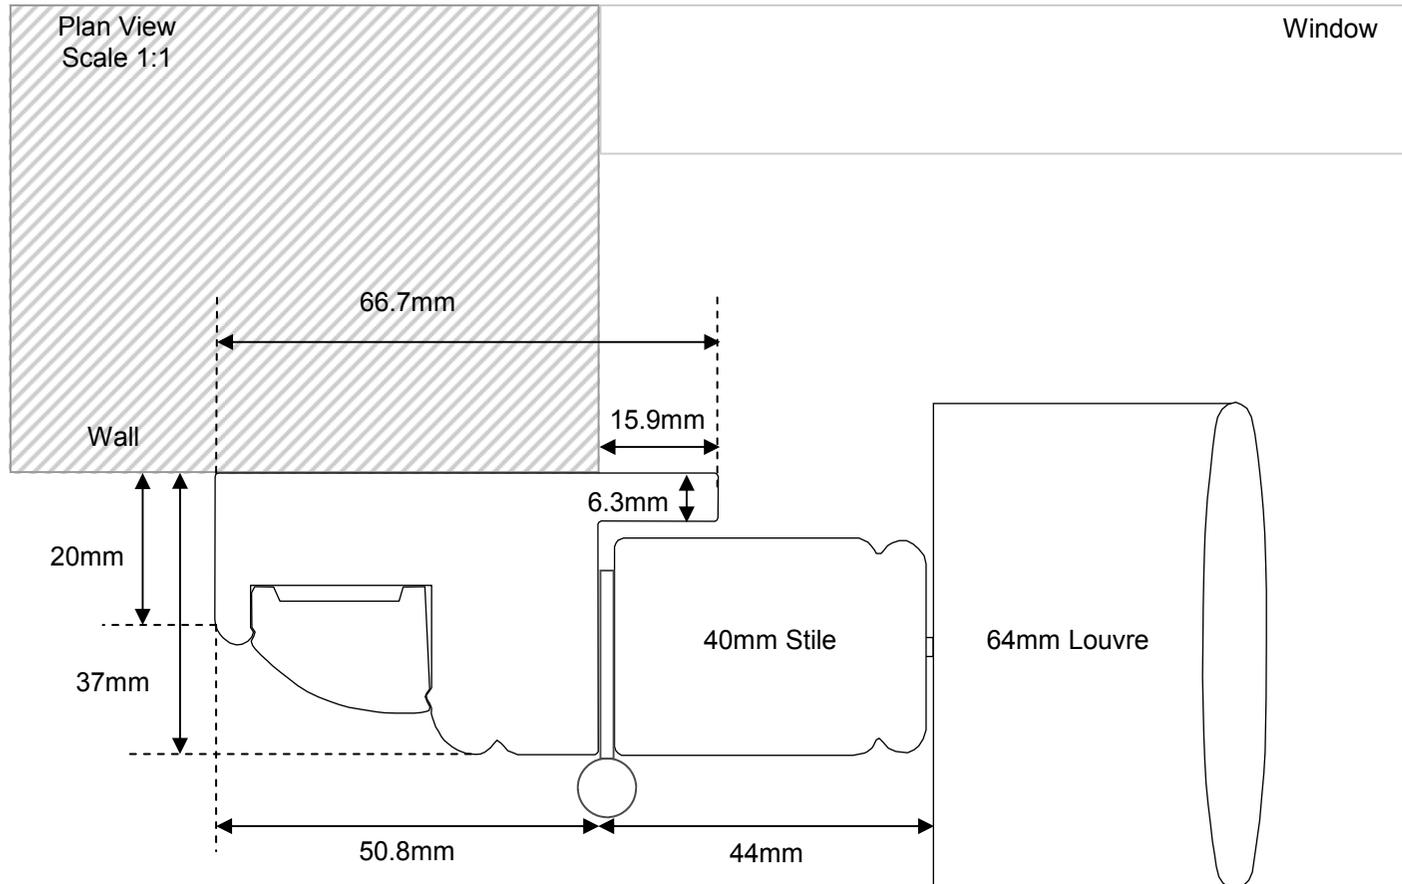

2.2: Technical

Technical drawing of the Deco frame

As standard the Deco frame over laps the recess by 15.9mm.

This overlap hides the recess if it is uneven. Even when the shutters are opened and wrapped around the wall all you will see is the neat inner edge of the frame.

Fixing

Be aware the fixing point on the Deco frame is close to the edge of the recess. So no large hammer drills (just gentle drilling).

Flaky walls

If you have flaky walls or you're unsure about drilling close to the edge of the recess, move the frame further out so that it overlaps the recess by a minimum of 5mm.

(Recess width + 72mm + 72mm.)

This will move the fixing point away from the recess edge.

Note

Be aware of moving the frame too far and catching the louvre blades on the edge of the recess.

Technical drawings

These drawings show the two Deco frame sizes available and optional sill plate.

Sill plate

The sill plate is designed to sit on the window sill providing a 4 sided frame option to this face fix frame.

MEASURING: DECO FRAME OPTIONS

