

## FITTING GUIDE: 7.4 FITTING OTHER DESIGNS

### Design: Top opening




There is not much difference when fitting the top opening option from the main guide, it will just take a little longer lining up the shutters and frames.

Fit the lower shutters into the frame first and square them up, then fit the the top set of shutters into the frame. Adjust the frame left or right and up and down if required to ensure both sets of shutters meet equally. Using mini clamps and packers between the tiers will help line up the shutters.

An extra pair of hands while fitting will be useful. Extra holes can be drilled in the frame, in line with the split height. This makes it easier to line up the shutters at the their central meeting point by moving the frame in or out.

Panel feet can be fitted underneath the top set of shutters to help line them up with the bottom set.

### Design: Half height

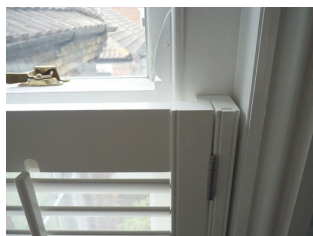

4 sided frames can be fitted as per the main guide.

If you are fitting a 3 sided frame (no top frame) you may need an extra pair of hands to help you lift and support the frame while fitting.

When there is no top section, the frame will be unstable until it is fixed to the window, so lift with care and keep the mitres square, do not twist them.

You still require a 5mm shadow gap down each side and along the bottom, the shutters will be flush with the top of the frame.

If your window is twisted you may need to adjust the hinges or pack out the back of the frame to help align the shutters where they meet as there will not be any top magnets. (View tips.)

When fitting on your own use some small clamps to keep the shutters together and level in the centre while lining up the frame with the window.