openshut

Specialist shutter training

2.1: Template

This template can be cut out and used as a guide.

Please check it's printed to scale before use!

MEASURING: DECO FRAME TEMPLATE

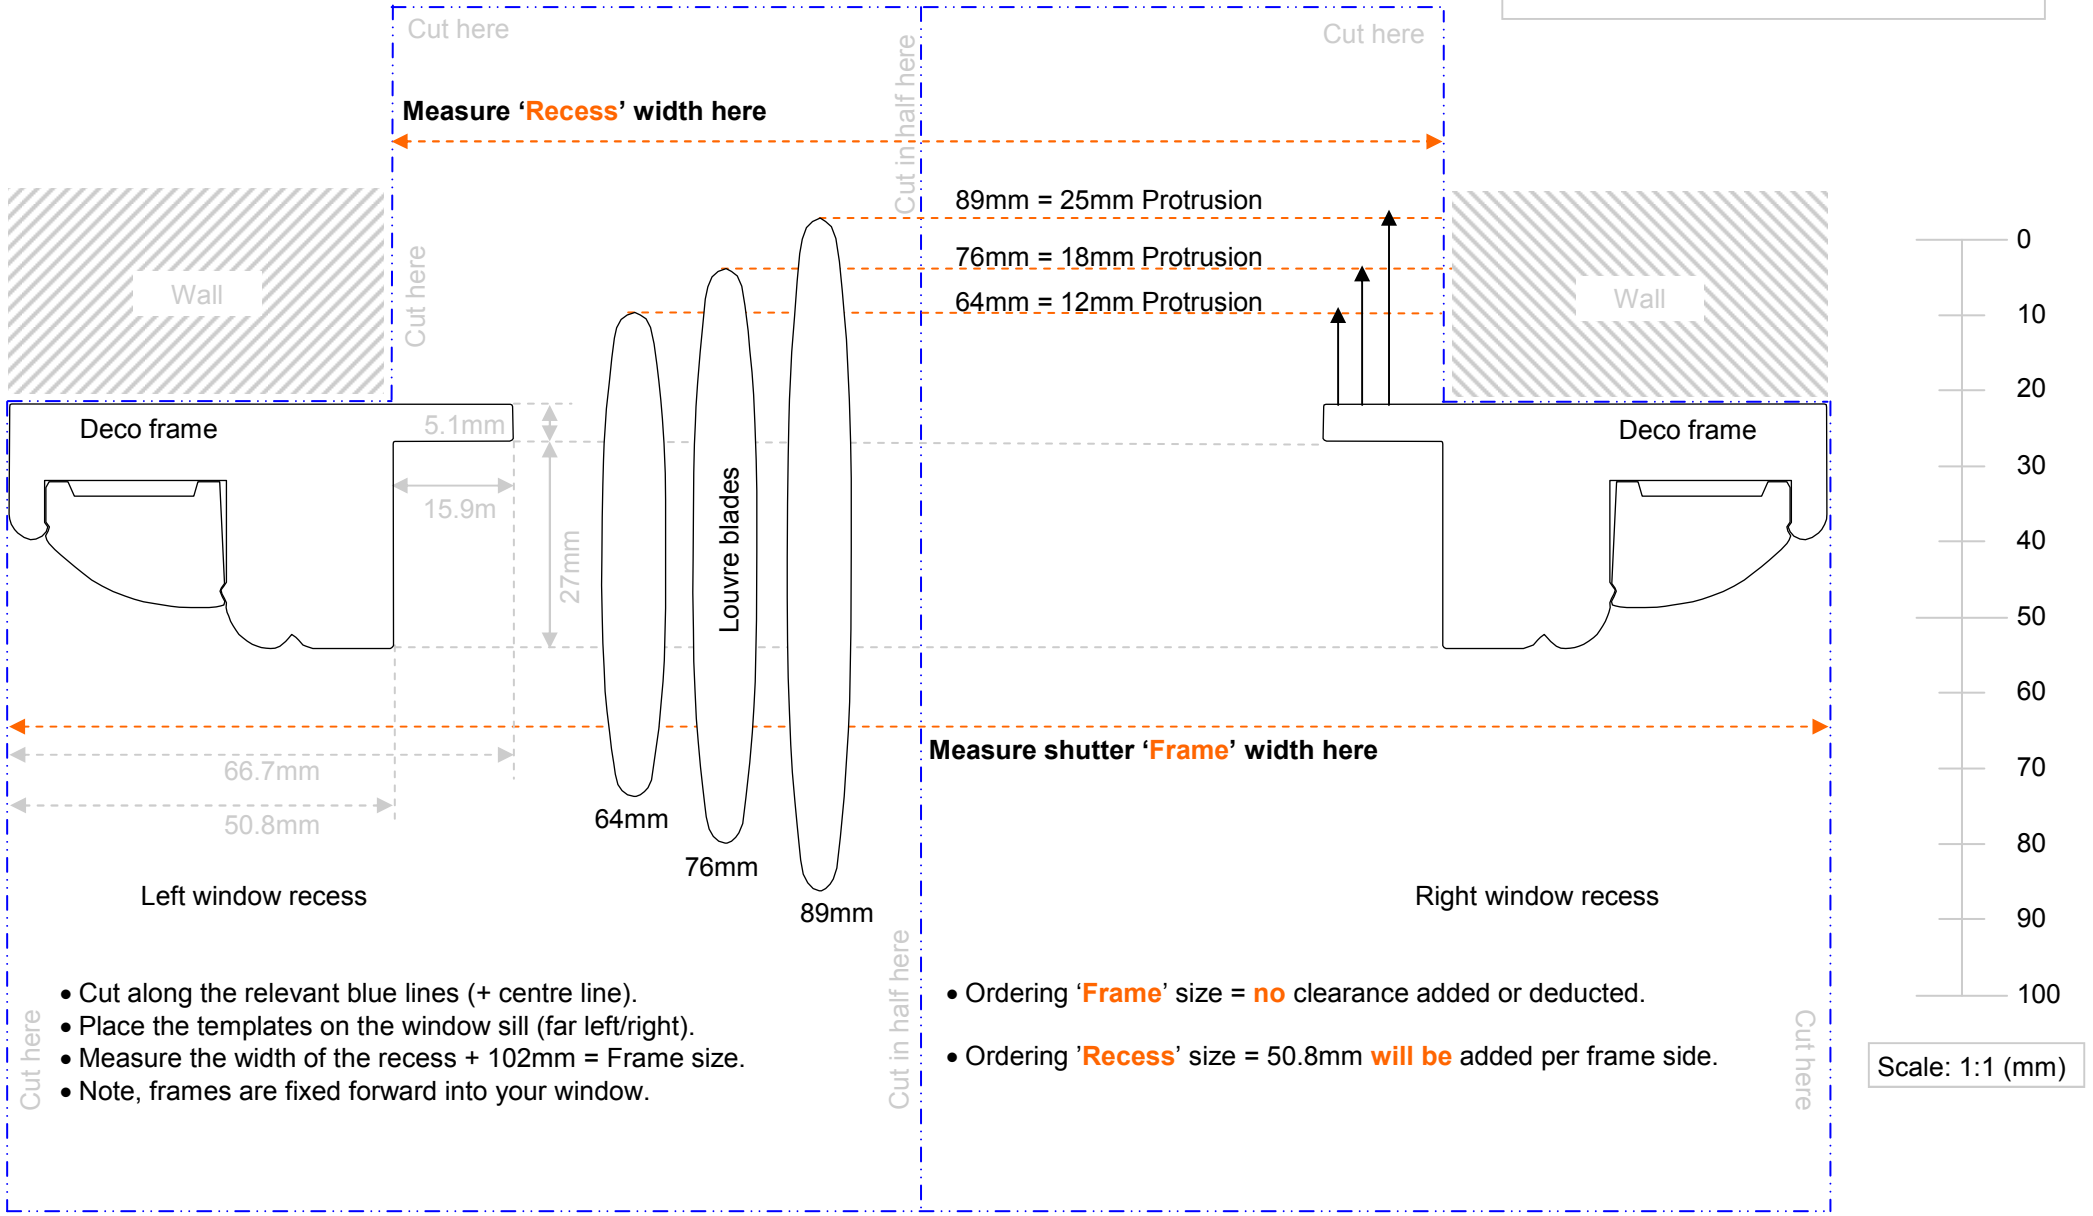

- Cut along the relevant blue lines (+ centre line).
- Place the templates on the window sill (far left/right).
- Measure the width of the recess + 102mm = Frame size.
- Note, frames are fixed forward into your window.

- Ordering '**Frame**' size = **no** clearance added or deducted.
- Ordering '**Recess**' size = 50.8mm **will be** added per frame side.

Scale: 1:1 (mm)